How to use your Honeywell Kleen-Dri™ Film Dryer

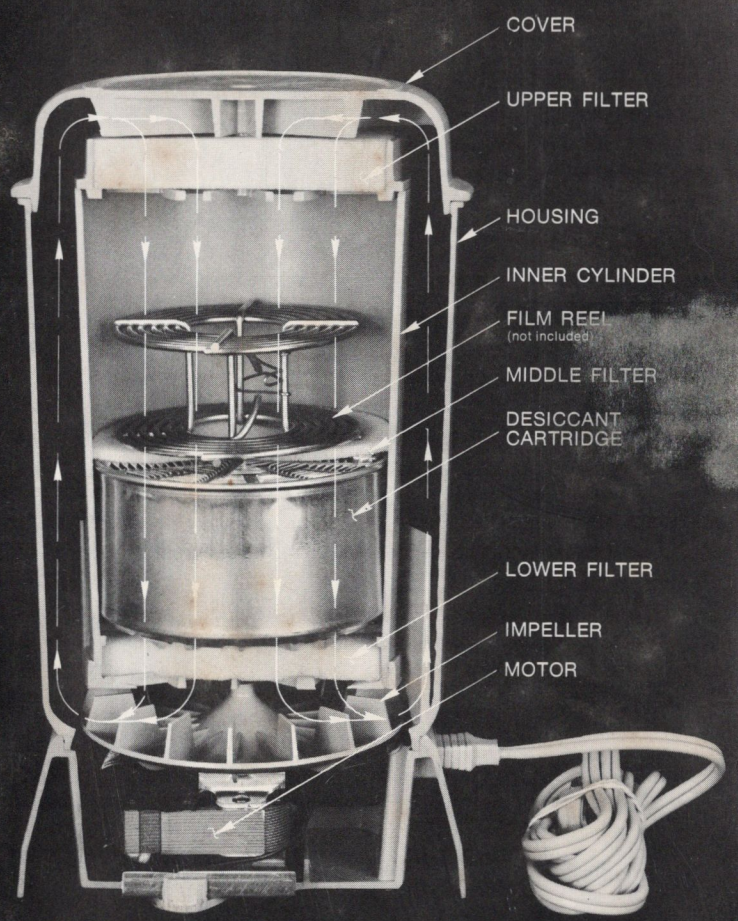

TO PREPARE YOUR NEW FILM DRYER FOR USE

Remove the Film Washer and set it aside.

Please refer to the cutaway photograph of the Film Dryer.

Remove the polyester foam Upper Filter and its holder which are packed upside down on top of the Air Duct.

Remove the Air Duct, and from it remove the electrical cord, the polyester foam Middle Filter, the Desiccant Cartridge, and, from the bottom, remove the polyester foam Lower Filter.

Remove and discard the wrapping from the Desiccant Cartridge.

GIVE THE DESICCANT CARTRIDGE A PRELIMINARY REGENERATION BY PLACING IT IN A 450°F. OVEN FOR ABOUT 2 HOURS AND THEN ALLOWING IT TO COOL FOR ABOUT 15 MINUTES.

TO REMOVE ALL DUST WHICH MAY HAVE ACCUMULATED DURING SHIPPING, CAREFULLY CLEAN ALL INTERIOR SURFACES OF THE DRYER WITH A DAMP CLOTH.

WARNING: Do Not Pour Liquids In Your Dryer!

Remove the Upper Filter from its holder. Rinse Upper, Middle, and Lower Filters in water and squeeze them as dry as you can. This will remove any dust which may have settled in the Filters. The Filters will dry quickly and cleanly the first time you use the Dryer.

Replace the Upper Filter into its holder. Attach the Upper Filter holder to the cover by pushing the pin into the cover AS FAR AS IT WILL GO. This should be done by pushing with the thumb at the center of the Filter. PUSH HARD. Do not push at the edges.

Reassemble the Dryer as shown in the photograph.

Your KLEEN-DRI Film Dryer is now ready to use.

Refer to operating instructions on cover.

FILMS AND REELS

If you use 120 film, a metal spool is preferable to a plastic spool because the spacing between film layers is about 50 percent greater and the possibility of damage from film buckling is greatly reduced. If the film is started perfectly straight on the 120-size metal spool and is wound carefully and fairly loosely, you should experience no difficulty. The thicker films such as Tri-X Pan, Plus-X Pan, and Panatomic-X are less likely to buckle than the thinner films such as Verichrome Pan.

In the case of 35 mm film, any type reel may be used as the film is narrower and cannot buckle.

IMPORTANT NOTES

There are several things that can cause dirt blemishes on your negatives. Most prevalent of these are the dirt and lint that accumulate on the gelatin surface during drying. With your KLEEN-DRI Film Dryer, that problem will never bother you again. Therefore, let us look into other sources of trouble.

1. When you load your camera, make sure that the inside of the camera is clean. Use a soft brush to remove any dust.

2. **FILTER YOUR DEVELOPER AND HYPO SOLUTIONS.** A Chemex-type coffee maker is a convenient, fast filtering device. Such a device is inexpensive.

3. A filter in your darkroom water system is of great help. If you do not possess one, then at least let your final wash be in water filtered in the Chemex-type coffee maker.

4. To obtain the cleanest possible negatives, it is best to avoid rapid fixers, as these may leave silver deposits on the surface of the film.

Incidentally, "water stains" is a general term used to denote the white calcium deposits which appear on the negative when it has been washed in hard water. You can combat this problem by using, in the final rinse, a wetting agent such as that marketed by Kodak under the trade name Photo-Flo. This solution reduces the surface tension of the water so that the water will run off the film rather than stand in droplets. *We suggest you try less than the recommended dilution. Try 50 percent less as a starter.* Of course, the whole problem of water spots can be avoided entirely by a final rinse with distilled water such as that which is sold everywhere for use in electric steam irons.

When Dryer is not in use, unplug it and replace cover to prevent accumulation of dust and moisture.

If you will observe all these precautions, you will be able to make clean mural-size prints from 35 mm negatives without those annoying white spots caused by enlarged dirt particles on the negative which have to be covered up with a spotting brush.

Warranty Policy

Your new Honeywell KLEEN-DRI Film Dryer is warranted for one year against defects in material or workmanship. This covers either the original purchase or the gift recipient. Any defect in your Film Dryer will be repaired or replaced (at our option) and defective parts will be replaced without cost to you within the 12-month period, provided the Film Dryer has not been abused, altered or operated contrary to instructions. Honeywell will not be liable for damages from delay or loss of use or other indirect consequential damages.

If your Film Dryer should require service, you may send it to the most convenient factory center listed.

HONEYWELL REGIONAL SERVICE CENTERS:

HONEYWELL INC.
Photographic Service Center
5501 South Broadway
Littleton, Colorado 80120

HONEYWELL INC.
Photographic Service Center
24-30 Skillman Avenue
Long Island City, New York 11101

HONEYWELL INC.
Photographic Service Center
7120 North Lawndale Avenue
Chicago, Illinois 60645

HONEYWELL INC.
Photographic Service Center
6620 Telegraph Rd.
Los Angeles, California 90022

HONEYWELL INC.
Photographic Service Center
Grand Arcade
141 The Arcade
Cleveland, Ohio 44114

Honeywell

Printed in U.S.A.

73002832-001